

MMS CAM 1.50 SMS syntax:

<smart header> [<channel> [<recipient>]]

Valid arguments values are gathered in following table.

Argument name	Valid value(s)	Remarks
<smart header>	//ymmscam	
<channel>	m	Images will be sent via MMS
	mm	If omitted channel will be taken from general settings.
	mms	
	e	Images will be sent via e-mail
	em	
	ema	
	emai	
	email	
	e-	
	e-m	
	e-ma	
	e-mai	
	e-mail	
		If omitted channel will be taken from general settings.
<recipient>	Any valid phone number for MMS channel or any valid e-mail address for e-mail channel. If omitted image will be sent to SMS addresser (for MMS channel) or e-mail address taken from contact database (for e-mail channel).	

Examples:

SMS Body	Meaning
//ymmscam	Take channel from general settings. If MMS channel send image to SMS addresser. If e-mail channel send image to address taken from contact database for SMS addresser.
//ymmscam e	Send image via e-mail. Take e-mail address from contacts.
//ymmscam mm	Send image via MMS.
//ymmscam m +48605111000	Send image via MMS to +48605111000 phone number
//ymmscam e mmscam@yellow.de	Send image to mmscam@yellow.de